

SERIES 61020 61030 61040 SOLIDS INTERCEPTOR
AND SERIES 61000 LINT INTERCEPTOR
CLEANING INSTRUCTIONS
15 JULY 2003

Frequency of Cleaning

Experience is the best guide to determine frequency of required cleaning since each installation is unique. Interceptors should be inspected regularly to determine if cleaning is required. Interceptors should be cleaned before there is significant reduction of flow through the interceptor.

Cleaning

1. Ensure that all fixtures draining into interceptor are empty and not in use. Ensure that no fixtures will be used prior to completion of interceptor maintenance.
2. Place a bucket or pan under interceptor to catch water and debris that may fall from the unit.
3. Drain unit if drain plug is provided.
4. Loosen or remove cover nuts or screws and remove cover.
5. Remove screen from interceptor body and clean it. Dispose of waste water and debris properly.
6. Remove debris from interior of interceptor body and dispose of properly.
7. Place screen inside interceptor body. Clean cover gasket surface and place cover on interceptor. Install cover nuts or screws and tighten. The interceptor is ready for normal operation.